


NVC Managed Wireless Router Installation

1. Plug the included power adapter into an electrical outlet and then into your new router (#1). Make sure that lights begin to turn on.
2. Using the included internet cable (or a cable you may already have in place), place one end into the white WAN slot (#2) on the back of your new router and the other into the internet slot on your modem. (We have many different models of modems, so if you are unsure which is the internet slot, please give us a call).
3. If you have any devices you would like to hard-wire into the router, you can plug them into any one of the four yellow ethernet port (#3).
4. That's it! It will take approximately 3-5 minutes for your router to boot up then your internet and Wi-Fi should be good to go!

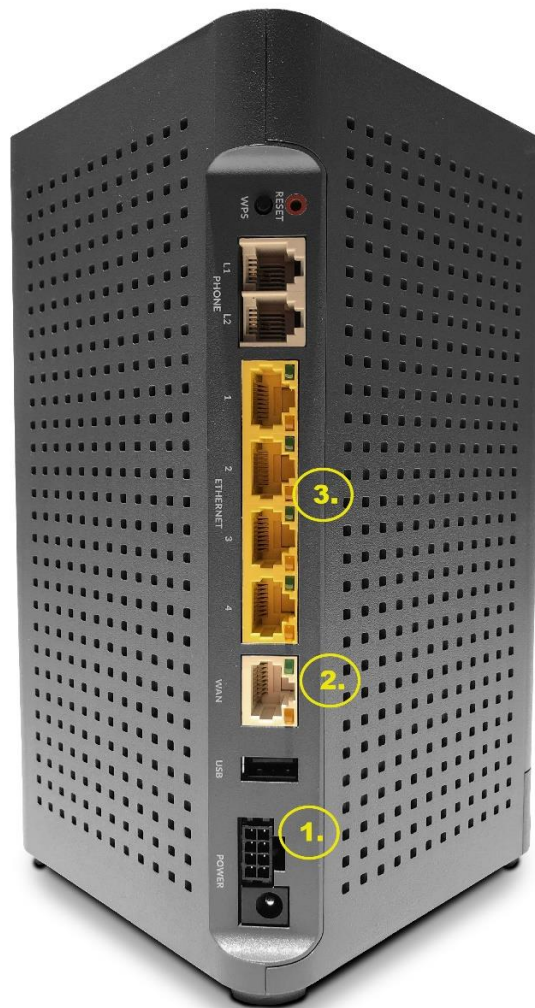

725-1001 nvc.net

